
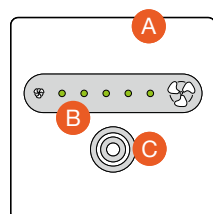


## Basic wiring diagram for KORAWALL Direct WVD convectors Heating or cooling

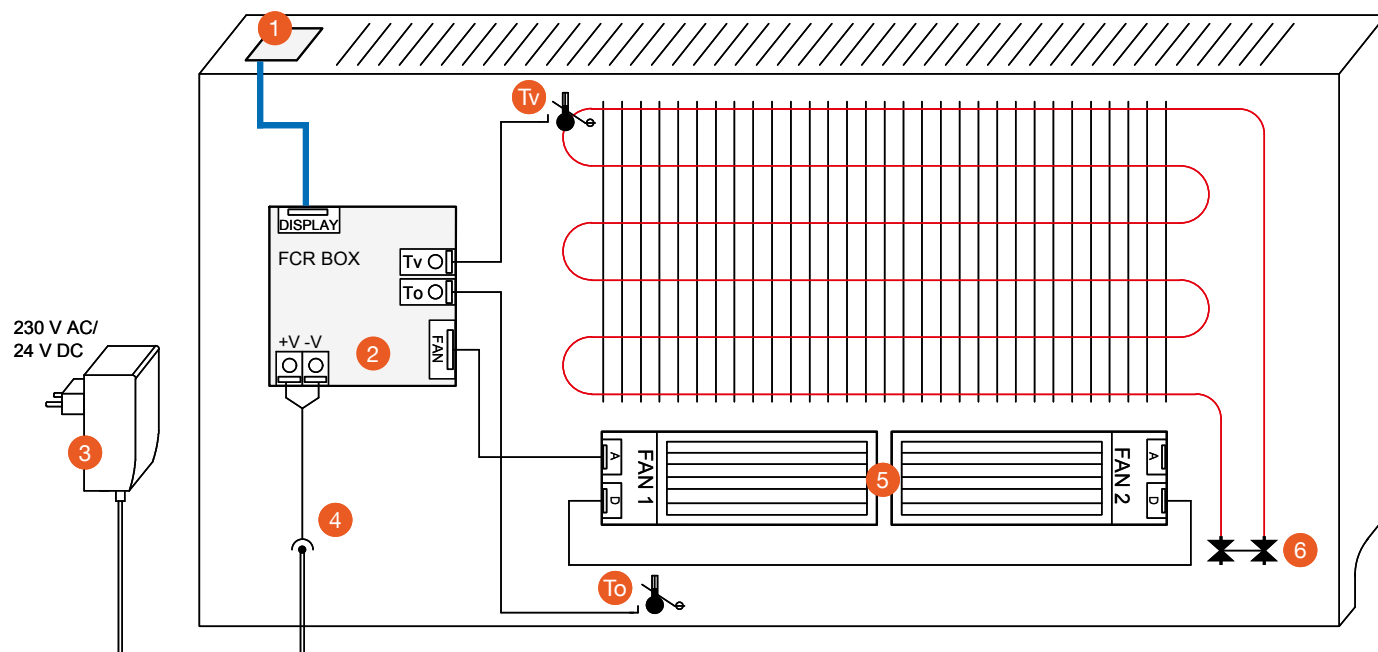

- A control touchpad
- B status indicators
- C control button

- 1 control touchpad for fan RPM heating/cooling
- 2 control unit of the convector FCR BOX
- 3 power supply 230 V AC / 24 V DC
- 4 connection connector
- 5 tangential low-energy EC fan assembly
- 6 thermostatic valve
- To temp sensor (room)
- Tv temp sensor (water)

Fan speed selection  **short, repeated press of the control button**

Heating mode  **LEDs are lit continuously**

Cooling mode  **LEDs are blinking**

Changing between heating and cooling mode  **Hold the control button for 10 seconds**

Fan speed	LED	Fan RPM
0	○ ○ ○ ○ ○	0 – Off
1	● ○ ○ ○ ○	1 – Min
2	● ● ○ ○ ○	2 – Low
3	● ● ● ○ ○	3 – Medium
4	● ● ● ● ○	4 – High
5	● ● ● ● ●	5 – Max